# FinnSafety






High quality protection

2017

### USER INSTRUCTIONS

Lathe chip guard SLS-106-1200

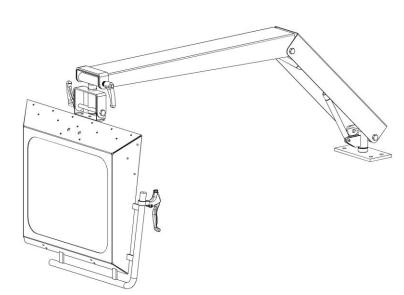

### Uses

The protector is meant to be mounted on lathes to provide protection from the shavings; the maximum diameter of workpieces on such lathes is 1100 mm.

### Dimensions

The protector plate is 520 x 645 mm in size. It has a PC-plate window, and the window opening is 430 x 340 mm in size. The outer arm of the protector leverage is 880 mm in length and the inner arm is 550 mm in length. The protector has a total mass of approx. 22-30 kg.

#### Installation

The protector can be installed using a separate, machine-specific fastening rack. The fastening rack needs to be attached to the rear part of the carriage. Four M10 screws are used to attach the protector's arms to the rack. When placing the fastening rack, sufficient room must be left for the protector plate movement. If unclear on any aspect of this, please contact the manufacturer.

#### Operation

The ball-and-joint attachment with its locking lever enables the protector plate to be turned and tilted to the desired position. Adjusting the height of the protector plate is arranged by means of a gas-powered spring by pressing down on the handle down. Releasing the handle locks the protector plate at the desired height. Sideways positioning is done by turning the protector plate. The friction brake located at the foot of the leverage prevents unintentional sideways movement.

#### Inspection and maintenance

The protector plate should be kept clean in order to maintain good visibility. If severely scratched or cracked, the protector plate's PC-plate must be replaced with a new one. Microfibre cloths and mild dishwashing detergent should be used when wiping a PC plate. If the protector plate has been dented, e.g. the arms are bent or the gas-powered spring is broken, the broken parts must be replaced with new parts.

The warranty period is two (2) years from the date of purchase; the PC-plate is not covered by the warranty.

#### Keuruun FinnSafety Oy

Käyntiosoite/ Street address Paljekuja 42700 KEURUU FINLAND

Puhelin/Telephone +358 207 959 090 e-mail: info@finnsafety.com www.finnsafety.com Y- tunnus 1712874-8 VAT FI 17128748 Alv rek.

# FinnSafety

High quality protection

Original 2 (5)



2017

EC Declaration of conformity for machinery (Machinery Directive 2006/42/EC, Annex II., sub. A)

EY-vaatimustenmukaisuusvakuutus koneesta (Konedirektiivi 2006/42/EY, Liite II A)

EG-försäkran om maskinens överensstämmelse (Maskindirektivet 2006/42/EG, bilaga 2, A)

Manufacturer / Valmistaja / Tillverkare: Keuruun FinnSafety Oy

Address / Osoite / Adress : Pl 39, FI-42701 Keuruu

Name and address of the person authorised to compile the technical file: Henkilön nimi ja osoite, joka on valtuutettu kokoamaan teknisen tiedoston: Namn och adress till den person som är behörig att ställa samman den tekniska dokumentationen:

Name / Nimi / Namn: Mika Hetekorpi Address / osoite / Adress: Paljekuja 4 FI-42107 Keuruu

Herewith we declare that safety component Vakuuttaa, että turvakomponentti Försäkrar härmed att säkerhets komponent

FinnSafetySystem GUARD	SLS-106-	SN 0001400 - SN 0001999
FinnSafetySystem GUARD	SLS-106-	SN 0001400 - SN 0001999
FinnSafetySystem GUARD	SLS-106-	SN 0001400 - SN 0001999

- Is in conformity with the relevant provisions of the Machinery Directive (2006/42/EC)
- on konedirektiivin (2006/42/EY) asiaankuuluvien säännösten mukainen
- Har följande grundläggande krav i maskindirektivet (2006/42/EC) tillämpats och fullföljts

And are manufactured according standard: Guards SFS-EN ISO 14120 Ja on valmistettu standardin Guards SFS-EN ISO 14120mukaan Vi försäkrar dessutom att standard Guards SFS-EN ISO 14120 har använts

Place,date / Paikka, aika / Ort och datum: Keuruu 01.01.2016

Signature / allekirjoitus / Signatur:

Mika Hetekorpi Managing Director / toimitusjohtaja / VD

Käyntiosoite/ Street address Paljekuja 42700 KEURUU FINLAND

Puhelin/Telephone +358 207 959 090 e-mail: info@finnsafety.com www.finnsafety.com Y- tunnus 1712874-8 VAT FI 17128748 Alv rek.

✓					۵				U			Original 3 (5			5)
4		DATE APPROVED		ahkokaavloon. Is		k lossen. taschine	it of the main contactor. achine's own electric chart.	S3= Lastunsuojan rajakytkin Mikrobrytare för spånskydd Endschalter fur schutzvorrichtungen Limit switch of the chip guard		FinnSafetv			SHEET 1/1 REV	4	
3	REVISIONS	ZONE REV DESCRIPTION		Rajakyttkimet kytketään työstökoneen pääkelakytkimen ohjauspiiriin.	Kytkenta on myos merkittava koneen omaan sahkokaavioon. Mikrobrytarna skall kopolas till huvudkontaktorns	styrkrets. Anteckning om detta måste göras på maskinens egen el-schema.	Die endschalter werden an den steuerstromkreis des hauptrelais der werkzeugmaschine angeschlossen. Der anschluss muss auch in die scaltpläne der maschine eingezeichnet werden.	The limit switch is connected to the control circuit of the main contactor. The connection must also be recorded to the machine's own electric chart.	S1= Pakansuojan rajakytkin Mikrobrytare för chuckskydd Endschalter fur drehfutterschutz Limit switch of the chuck guard	K1= Sorvin päämoottorin kontaktori Kontaktor vid svarvmotor Relais des hauptmotors der drehmaschine Contactor of the main motor		n∈ FSS- Sorvisuojat / suorakaynnisteiset FSS- Svarvskydd / direktkopplade FSS- Drehmaschinenschutz / Maschinen mit direktstart FSS- Lathe guards / Direct starting machines	A4 A	1:1 REL DATE 10.04.2014 WEIGHT	3
2						S1 /	P S3		ک ک			The FSS- Sorvisuoj FSS- Svarvsky FSS- Drehmas FSS- Lathe gu	JHe	EAJ	2
				stop 0 $\left[ \begin{array}{c} 1 \\ 4 \\ 2 \end{array} \right]$					start I F	  	A1	K1 A2	_		
			<				۵		ر	د		(			

<pre></pre>						8			0			Original 4 (5)		
4	APPROVED			- kôkaavioon.	Issen.		of the main contactor. chine's own electric chart.	S3= Lastunsuojan rajakytkin Mikrobrytare för spånskydd Endschalter fur schutzvorrichtungen Limit switch of the chip guard			FinnSafety		<b> </b>	
3	REVISIONS	ZOME REV DESCRIPTION		Rajakytkimet kytketään työstökoneen pääkelakytkimen ohjauspiiriin. Kytkentä on myös merkittävä koneen omaan sähkökaavioon.	Mikrobrytarna skall kopplas till huvudkontaktorns styrkrets. Anteckning om detta måste göras på maskinens egen el-schema.	Die endschalter werden an den steuerstromkreis des hauptrelais der werkzeugmaschine angeschlossen. Der anschluss muss auch in die scaltpläne der maschine eingezeichnet werden.	The limit switch is connected to the control circuit of the main contactor. The connection must also be recorded to the machine's own electric chart.	S1= Pakansuojan rajakytkin Mikrobrytare för chuckskydd Endschalter fur drehfutterschutz Limit switch of the chuck guard	S2= Käyttövivun rajakytkin Mikrobrytare vid kopplingsaxel Endschalter des betätigungshebels Limit switch of the operation lever	K1= Sorvin päämoottorin kontaktori Kontaktor vid svarvmotor Relais des hauptmotors der drehmaschine Contactor of the main motor	m∈ FSS- Sorvisuojat / Lamellikytketyt koneet FSS- Svarvskydd / Lamellkoplade maskiner FSS- Drehmaschinenschutze / Maschinen im dauerbetrieb FSS- Lathe guards / Continuous starting machines	SIZE A4 A4 A4 A4 A4 A4 A4 A4 A4 A4	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	
							SS O		K1		mte FSS- Sorvisuc FSS- Svarvsk FSS- Drehmar FSS- Lathe gr	DESIGNER JHE APPROVED EAL		
1				stop 0 $\left[ \begin{array}{c} 1 \\ 4 \\ 2 \end{array} \right]$					Start -	F F A	K1 A2			
			∢			<u> </u>			<u> </u>			<u> </u>		

